

Periodic Maintenance and Lubrication Chart

Sr. No.	Operation		↻ Whichever come first	Recommended Frequency					
				Or	Initial				Subsequent
					750 30	2,500 90	5,000 150	2,500 225	Every 2,500 Kms Every 75 days
1	Servicing								
2	Valve Clearance	A						Every 5000 Kms	
3	Engine oil (SAE 20W40 of API SG + JASO MA)	R						Every 5000 Kms	
4	Oil Strainer	CL						Every 10000 Kms	
5	Air cleaner element *	CL							
6	Air Cleaner element	R						Every 10,000 Kms	
7	Carburetor / Idle speed / CO %	CL,A							
8	Fuel System leakages	C,R							
9	Fuel Pipes	R						Every Year	
10	Spark Plug / Gap	CL,A							
11	Spark Plug	R						Every 10,000 Kms	
12	Brake light switch	C,A							
13	Clutch play	C,A							
14	Throttle play	C,A							
15	TPS adjustment and proper functioning	C,A							
16	Front brake lever play	C,A							
17	Rear brake pedal play	C,A							
18	Brake lining wear	C,R							
19	Steering play	C,A,R							
20	All fasteners tightness	T							
21	Tyre tread wear	C,R							
22	Spoke tightness & Rim run out	C,A							
23	General lubrication	L							
24	Steering stem bearing	L	1 Year					Every 10,000 Kms	
25	Wheel bearing	L	1 Year					Every 10,000 Kms	
26	Swing arm pivot pin	L						Every 10,000 Kms	
27	Front Fork	C						Every 5000 Kms	
28	Front Fork oil	R						Every 10,000 Kms	
29	Battery electrolyte level	C,A	15 Days						
30	Rear shock absorber	C,R							
31	Front Brake Cable	C,R	2 Years						
32	Drive chain	L						Every 500 Kms	
33	Drive chain slack	C,A						Every 2500 Kms	
34	Valve lapping							Every 30,000 Kms	
35	Valve oil seal	R						Every 30,000 Kms	

• : Indicates operation to be performed

* : More frequent cleaning may be required when driving in dusty condition

Note : Parts / Lubricants to be replaced as per Periodic Maintenance and Lubrication chart are mandatory and the same are chargeable to customer.

A : Adjust

C : Check

T : Tighten

CL : Clean

L : Lubricate

R : Replace