

BOXER BM 100

Bajaj Auto Limited

Akurdi Pune 411 035 India

Tel +91 20 27472851

Fax +91 20 27407395

www.bajajauto.com

BOXER BM 100

**User's Guide
(Export)**



Dear Customer,

Congratulations on choosing “**Boxer BM 100**” motorcycle, one of the finest motorcycles in the country brought to you by Bajaj Auto Limited.

Before you prepare for riding, please read this User's Guide carefully to familiarize yourself with the mechanism and the controls of the vehicle.

To maintain your bike in perfect running condition to deliver consistent performance, we earnestly advise you to avail periodic services, at Bajaj Dealers.

You can entrust Bajaj Dealers, who are well equipped with all necessary facilities, skill sets and trained manpower for servicing and repairs of your “**Boxer BM 100**”. In the rare event of going to a local garage, always insist on Genuine Bajaj Spares to ensure safety, performance and longer life of your vehicle.

Should you require any additional information, please approach Bajaj Dealers. If necessary, you may also write to selling dealers, with relevant details like Registration no. Chassis no., Engine no., Date of purchase, Kms. run, name of selling dealer and your contact numbers.

Finally, may we request you to give your motorcycle a proper care and regular maintenance, as described in this manual. We are sure this will offer you a long trouble-free ownership experience.

Wishing you unlimited miles of happiness!

International Marketing
BAJAJ AUTO LIMITED
Akurdi Pune - 411 035 India

Non-use maintenance is necessary if a vehicle remains off road for a longer duration (more than 15 days**). The correct and careful non-use maintenance carried out before storing the vehicle will prevent the vehicle from rusting and from such other non-operational damages like fire hazards.

- Clean the entire vehicle thoroughly.
- Empty the fuel from the fuel tank and carburettor float bowl (if fuel is left in for a longer time, the fuel will break and gummy substance could clog the carburettor).
- Remove the spark plug and put several drops of 2T oil into the cylinder. Kick the engine over slowly a few times to coat the cylinder wall with oil and install back the spark plug.
- Set the vehicle on a box or a stand so that both the wheels are raised off the ground.
- Spray oil on all unpainted metal surfaces to prevent rusting. Avoid getting oil on rubber parts or brake liners.
- Lubricate the control cables.

- Cover the entire vehicle neatly. Make sure that the storage area is well ventilated and free from any source of flames or spark.

Preparation for regular use after storage :

- Clean the vehicle
- Make sure the spark plug is tight.
- Fill the fuel tank with fuel.
- Change the engine oil.
- Check all the points listed in the Daily Safety Checks section.
- Check and inflate tyres to the proper tyre pressure.

**** For Battery:**

- a. Remove battery and keep it on wooden plank, in properly ventilated area.
- b. Before taking the vehicle for use.
 - Get the battery recharged from the Authorised Service Center / Battery Dealer.
 - Check and correct electrolyte level & apply petroleum jelly on terminals (applicable to certain models).